


STRAIGHT RUN INSTALLATION GUIDE

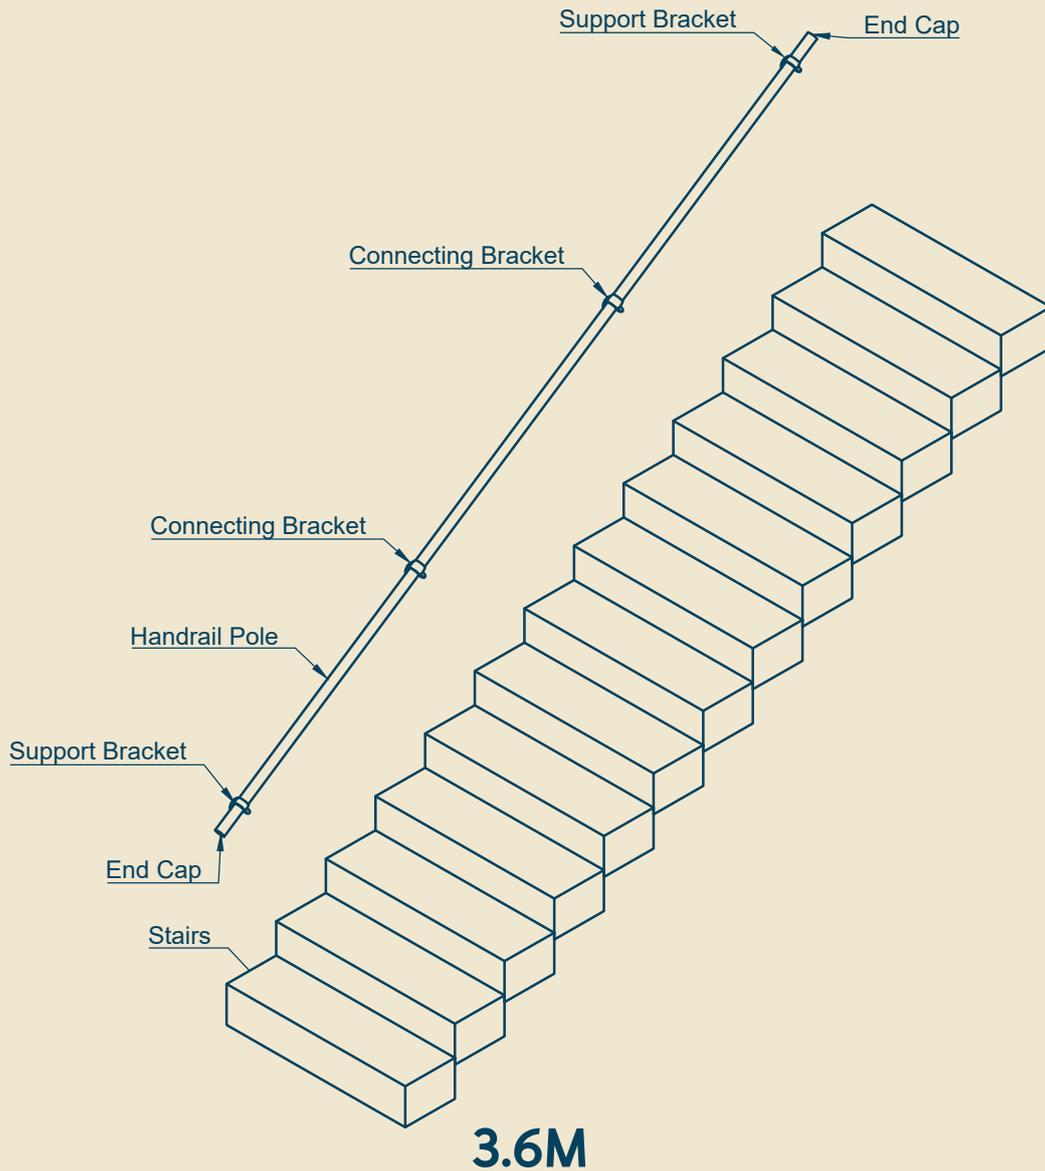

HANDRAILS
direct

Phone: 0300 303 2023
Email: hello@handrails-direct.co.uk

Components Included

- **3 × Handrail Poles**
- **2 × Connecting Brackets**
- **2 × Support Brackets**
- **2 × End Caps**
- **18 × Wall Plugs & Screws**
- **1 × 2 mm Hex Key**

Required to Fit

- **1 × Philips Screwdriver**
 - **1 × Large Straight Edge**
 - **1 × Electric Drill with 8 mm Masonry Bit**
 - **1 × Pencil**
-

SETTING THE GUIDELINE

Step 1 – Bottom to Top Step

- **Measure 805 mm vertically from the front edge of both the bottom and top steps.**
- **Connect these points with a guideline parallel to the stair angle.**

Step 2 – Locate Centre Point

- **Measure the total distance between the bottom and top step edges (e.g. 3600 mm ÷ 2 = 1800 mm) and mark the centre along the guideline.**

Step 3 – Mark Connecting Bracket Position

- **From the centre point, measure 600 mm toward the top step along the guideline and mark this location for the first Connecting Bracket.**
-

FITTING THE COMPONENTS

Step 1 – Install First Connecting Bracket

- **At the 600 mm mark toward the top step, install a Connecting Bracket.**
- **Align the top two holes of the backplate with the guideline.**
- **Mark, drill (8 mm × 50 mm), insert wall plugs, and screw into place.**

Step 2 – Install First Handrail Pole and Second Connecting Bracket

- **Insert a Handrail Pole into the installed Connecting Bracket (towards the bottom step).**
- **Fit a second Connecting Bracket onto the other end of the pole.**
- **Align the top holes with the guideline.**
- **Mark, drill, insert wall plugs, and screw into place.**

Step 3 – Install Lower Support Bracket

- **Insert a second Handrail Pole continuing towards the bottom step.**
- **Fit a Support Bracket to this pole, positioning it 200 mm from the end.**
- **Tighten the grub screws on both brackets to secure the Handrail Pole.**
- **Align the Support Bracket's top holes with the guideline.**
- **Mark, drill, insert wall plugs, and screw into place.**

Step 4 – Install Upper Support Bracket

- **Insert a third Handrail Pole towards the top step.**
- **Fit a Support Bracket 200 mm from the end of the pole.**
- **Tighten the grub screws to secure.**
- **Align, mark, drill, insert wall plugs, and screw into place.**

Final Checks

Step 5 – Complete the Installation

- **Ensure all Bracket screws and grub screws are securely tightened.**
- **Fit End Caps to the open ends of the Handrail Poles.**